

ORBRY TOUCH THERMOSTAT EASY SET UP GUIDE:

OBUHTOUCH

Don't forget to activate your warranty within 60 days of purchase.
Visit orbry.com/warranty.



1. SET TIME & DATE

1. Tap the 'power' button to switch unit on.
2. The backlight will fade after around 10 seconds.
3. Tap the "Clock" button to switch it back on at any point.
4. Press and hold the "Clock" button for around 7 seconds or until the minutes begin to flash.
5. Use the "Up" and "Down" arrows to select correct minute.
6. Tap the "Clock" button to switch to hour and use "Up" and "Down" to select the correct hour.
7. Tap the "Clock" button again to edit the day.
8. Use the "Up" and "Down" arrows to select the correct day number:
1 = Mon, 7 = Sun.
9. Tap the "Clock" button to save time and date settings.

ICON KEY:

| | | | |
|--|------------------------|--|--------------|
| | Up | | Period 2 |
| | Down | | Period 3 |
| | Power | | Period 4 |
| | Manual control mode | | Period 5 |
| | Program mode indicator | | Period 6 |
| | Menu button | | Heating on |
| | Period 1 | | Clock button |

2. ADVANCED SETTINGS

1. To access advanced setting switch the unit off by tapping the "Power" button.
2. Then press and hold both the "Power" and "Menu" button.
3. Tap the "Menu" button to switch to **Sensor mode** (2SEN) and set to OUT.
4. Tap "Menu" x3 to switch to **Frost Protection Mode** (SLrP).
5. Set this to "On" using the "Up/Down" arrows.
6. Tap the "Menu" button to set your program days.
7. Tap "Up/Down" to set the program days.
8. Program options include:
 - 6 days same & 1 separate day
 - 7 days same
 - 5 days & weekend (recommended)
 - Program off
9. Tap the "Menu" button and switch off to save your settings.















3. MANUAL MODE

1. You can switch between **Manual** and **Schedule** by tapping "Menu".
2. When in **Manual** mode, set a target temperature manually using the "Up/Down" arrows.
3. When the target temperature is set above the ambient temp, you will see the HEAT symbol (flame) below the target temp.

4. HEATING SCHEDULE

1. Tap "Menu" to switch the unit into **Schedule** mode.
2. You will see both the CLOCK and HOUSE symbols displayed.
3. Press and hold "Menu" for 7 seconds to edit your schedule.
4. Firstly, set the start time for period 1 using the "Up/Down" arrows.
5. Tap "Menu" to save your start time and set the Comfort Temperature to between 20 and 25°C.
6. Tap "Menu" to advance to period 2 and select the desired time using "Up/Down".
7. Tap "Menu" to save your start time and set the Eco Temperature between 18 and 20°C.
8. Tap "Menu" to advance to period 3 and select the desired time using "Up/Down".
9. Tap "Menu" to save your start time and set the Comfort Temperature to between 20 and 25°C.
10. Tap "Menu" to advance to period 4 and select the desired time using "Up/Down".
11. Tap "Menu" to save your start time and set the Eco Temperature between 18 and 20°C.
12. Tap "Menu" to advance to period 5 and select the desired time using "Up/Down".
13. Tap "Menu" to save your start time and set the Comfort Temperature to between 20 and 25°C.
14. Tap "Menu" to advance to period 6 and select the desired time using "Up/Down".
15. Tap "Menu" to save your start time and set the Eco Temperature between 18 and 20°C.
16. Now you have a schedule set for 5 days. Tap "Menu" to set your weekend heating.
17. Select a later start time if you like a lie in. This time will apply to both days.
18. Tap "Menu" to save your start time and set the Comfort Temperature between 20 and 25°C.
19. Tap "Menu" to save your temperature and advance to period 20. Set the desired start time and set the Eco Temperature between 18 and 20°C.
21. You should now have a complete 7 day heating schedule.
22. Simply tap "Power" to activate your schedule and you are done.

ICON KEY:

-  Up
-  Down
-  Power
-  Manual control mode
-  Program mode indicator
-  Menu button
-  Period 1
-  Period 2
-  Period 3
-  Period 4
-  Period 5
-  Period 6
-  Heating on
-  Clock button

Don't forget to activate your warranty within 60 days of purchase.
Visit orbry.com/warranty.

This schedule is a guide only and your Orbry Touch Thermostat should be programmed to fit your personal lifestyle. For help setting up your own personal heating schedule, contact our support team at info@orbry.com.

Thank you for choosing Orbry Underfloor Heating.

